

•
•
•
•
•
•

Accordions International
1760 South 450 West
Salt Lake City, UT 84115
www.AccordionInfo.com
Phone 801-485-5840

Accordions International

Concerto DIA-100 - 260

**Digital Accordion
User Manual**



*The ultimate accordion
capable of producing an
entire World of sounds
with variety and contrast!*

Concerto Grill Layout

The control panel is organized into several functional sections:

- Top Section:** Includes buttons for **Split**, **TRANS.**, **ARR.**, **C.HOLD**, **T.START**, **SOLO**, **Orch. 1**, **Orch. 2**, **Start/Stop**, **Manual Drums**, **Select**, **TRACK**, **EXIT**, **REVERB**, **TOUCH**, **CHOR.**, **BELLOW**, **NEXT**, **SONG**, **Factory Song**, and **User Songs**.
- Instrument Selection Section:** A grid of buttons for various instruments, each with a red indicator bar above it. The instruments are:
 - Row 1: Piano, Organ 1, Guitar 1, String 1, Clarinet, Trumpet, Vibe, A Bass
 - Row 2: EP 1, Organ 2, J Guitar, String 2, Sax, Tromb., Banjo, F Bass
 - Row 3: EP 2, Organ 3, E Guitar, Choir, Flute, Brass, Marimb, E Bass
 - Row 4: H Piano, Organ 4, Mandol., Violin, Oboe, F Horn, Steel D, Tuba
- Counters and Song Registers:**
 - Counters:** +0 Song F, 55 BassAc, 32 Piano1, 21 StrSlo, ROF T120, Violin OF, Piano1 55, StrSlo 35.
 - Song Registers:** A row of buttons numbered 1 through 8, with a red indicator bar above each.

Concerto Grill - Split, Range, Volume Control & Display

Control panel for Concerto Grill. It features a central display window showing the following information:

- +0 Song F ROF T120
- 55 BassAc Violin OF
- 32 Piano1 Piano1 55
- 21 StrSlo StrSlo 35

Surrounding the display are various controls:

- Buttons 1-4: Split, Range, Range, ARPEG.
- Buttons 13-16: TRANS., BASS, Chord 1, Chord 2.
- Buttons 5-7: ARR., C.HOLD, T.START.
- Buttons 8-10: Select, TRACK, [Volume Knob].
- Buttons 17-20: [Volume Knob], SOLO, Orch. 1, Orch. 2.
- Buttons 11: Start/Stop.

Concerto Small Display

Small display showing a large red 'F' in the center. Below it are volume level indicators for:

- Bass: 70
- CH 1: 71
- CH 2: 72
- Solo: 73
- OR1: 74
- OR2: 75

Concerto Grill Effects, Exit & Next

Control panel for Concerto Grill Effects, Exit & Next. It includes:

- Buttons 21: [Volume Knob]
- Buttons 22: REVERB, CHOR. 23
- Buttons 24: TOUCH, BELLOW 25
- Buttons 26: NEXT
- Buttons 12: EXIT, SONG 59

Concerto Grill - Sounds & Registers

Control panel for Concerto Grill Sounds & Registers. It features a grid of sound and register buttons:

- Row 1: 22 Piano, 31 Organ 1, 35 Guitar 1, 39 String 1, 43 Clarinet, 47 Trumpet, 51 Vibe, 55 A Bass
- Row 2: 23 EP 1, 32 Organ 2, 36 J Guitar, 40 String 2, 44 Sax, 48 Tromb., 52 Banjo, 56 F Bass
- Row 3: 24 EP 2, 33 Organ 3, 37 E Guitar, 41 Choir, 45 Flute, 49 Brass, 53 Marimb, 57 E Bass
- Row 4: 25 H Piano, 34 Organ 4, 38 Mandol., 42 Violin, 46 Oboe, 50 F Horn, 54 Steel D, 58 Tuba

Below the grid are buttons for:

- SONG 59 (User Songs)
- Buttons 60-67: 1, 2, 3, 4, 5, 6, 7, 8 (Factory Song)

Labels: User Songs, Factory Song, Song Registers.

.....

Getting the most out of your Concerto DA-250

*Thanks for selecting Concerto.
We are here to serve you!*

Best Wishes

We at Accordions International wish to thank you for choosing the incomparable Concerto D/A Digital Acoustic Accordion. Concerto combines high levels of technology, rich CD quality sound, and an easy to use format. We are confident you will find it to be the most advanced and easiest to use accordion of its kind.

We urge you to read and study this manual carefully so you may obtain the maximum benefits and receive many years of satisfaction from your new Concerto accordion. After reading this manual should you need further help then please feel free to contact us for technical support. Below are several ways to choose from.

You may contact us via the World Wide Web at <http://www.AccordionInfo.com>. Where you may find updated information. Or email us directly at Concerto@AccordionInfo.com

Or

You may phone Toll Free for an Appointment with our Tech Support; 1-800-935-0013


Please identify yourself, include your phone number and best time to call.

Please take the time to review this manual and then if you feel you still are unclear or need help then please contact us for support.

Overview

Concerto is a simple to use, yet powerful system providing complete control at the touch of a button. Simply touching a register button recalls an entire, global setup, which includes sounds, volumes, octaves, effects, effect levels, velocities, and many other parameters. Concerto features eight factory registers for instant playing pleasure, and the ability to set 128 of your own favorite registers.

Registers are stored in groups of eight, called a song, and may be stored on optional RAM memory cards. Registers may be sequenced from the expression pedal allowing for hands-free sequencing.

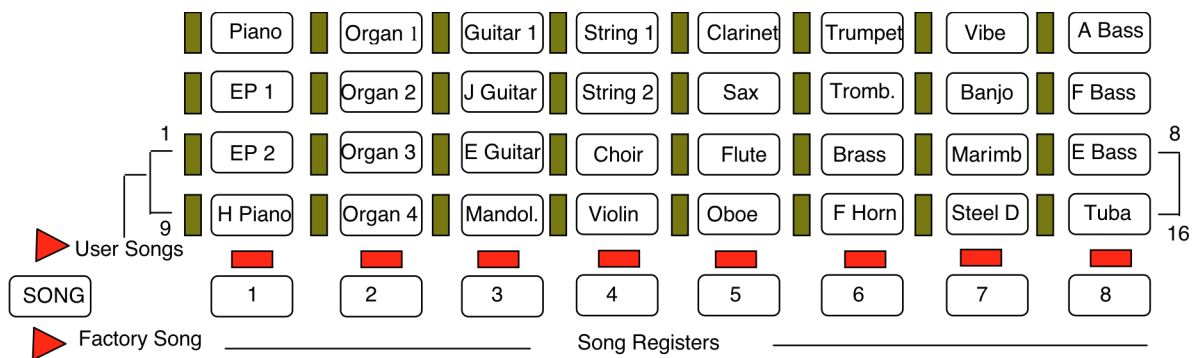

By touching one of the 32 sound select buttons, you may quickly change sound settings in real time, allowing you to perform without programming the registers. The six LED's located on the top side of the grill will indicate which section is assigned to the 32 tone select buttons. If you wish to change a bass sound simply press the bass button to light up the bass led and make your selection from the 32 tone buttons.

Concerto has eight families of voices (piano, organ, guitar, etc.). Each family has four sounds that can be recalled at the touch of a button. Over 300 additional sounds are available in the sound library.

Concerto features six sections, three for the left hand (bass, chord 1, and chord 2) and three for the right hand (solo, orchestra 1, and orchestra 2). A separate sound may be selected for each section providing for a rich layering of sounds which may be fine tuned with volume, velocity, octave range, reverb type and level, chorus type and

level, repeat and other effects, tempo settings for external drum, and sequencer devices.

We urge you to study this manual carefully and to keep it as a handy reference to your Concerto.

This manual has been written for the Concerto DA-250 but is also valuable for the DA-100 and DA-200 models. Please note that both the DA-200 and DA-250 have the same hardware except for the Sound Engine. The DA-250 has more sounds and more memory to provide even more accurate sound than the previous models.

For those who are reading this manual that own a DA-100 the major functional difference is in how you back-up or archive the registers saved in your accordion. With the DA-100 they are saved on battery backed memory cards. Please see Appendix C at the end of this manual for specific instructions on how to use the Concerto RAM 64 Memory Cards.

Those with the DA-200 and DA-250 have the latest technology in FLASH memory that requires no batteries and is non-volatile. Instructions for how you back-up or archive the registers saved in your accordion are included in Chapter 5 of this manual.



Chapter One

Concerto Setup

Inventorying Your Equipment

After unpacking your new Concerto carefully place all of the items in front of you. Check that you have all of the following:

- 1 Concerto accordion
- 1 Concerto generator
- 1 Concerto power supply
- 1 Volume pedal (expression pedal)
- 1 Four-way foot switch
- 1 Foot-switch cable (with a five pin connector on one end and a nine pin connector on the other)
- 1 Firing cable (eight pin DIN plug on both ends)
- 2 Audio cables for Generator Left and Right
- 1 Stereo Y Cable for amplified accordion.

You will also need an amplifier or a stereo PA system capable of handling Concerto's full spectrum of sound. Your local dealer should be able to assist you in choosing the correct amplification for your specific needs.

Connecting Your Concerto

The following steps will assist you in correctly connecting your Concerto.

- A. Connect the firing cable to the bottom of the Concerto and to the generator connector labeled "accordion"
- B. Connect the volume pedal to the generator jack labeled "pedal 1"
- C. Connect the four way foot pedal to the generator jack labeled "pedal 2"
- D. Connect the power supply to an electrical outlet and then to the generator jack labeled "power"
- E. Connect the audio cables to the stereo left and right outputs of the generator, then to two channels on the amplifier. It is important that both channels used on the amplifier have the same settings.
- F. Power up the Concerto
- G. Turn on the amplifier (to prevent popping in the speakers turn the amplifier off before turning off the rest of the equipment)
- H. Adjusting the volume: With the expression pedal in the maximum position (all the way down) and the Concerto's volume at the 3 O'clock position gradually raise the volume on the amplifier until you are at the loudest forte you desire. The expression pedal will now provide a full range of volume from zero to full volume.





Chapter Two

Factory Set Registers

Exploring the Eight Factory-set Registers

Each time Concerto is turned on an automatic systems check will be performed. At the same time the large display identifies the software version currently being used. After about four seconds the display will go immediately to factory-set song register 1.

Factory-set Registers

(Please note - The numbers in parenthesis - example (60) - refer to the drawing on page 3.)

- ❖ **Register 1 (60):** Features acoustic piano and slow strings on the right hand, and acoustic bass, acoustic piano, and slow strings on the left hand.
 - ❖ Phantom*: Violin
- ❖ **Register 2 (61):** Features great theater organ combination on both right and left hands.
 - ❖ Phantom*: Trumpet
- ❖ **Register 3 (62):** Features acoustic nylon guitar with slow strings on the right hand, and acoustic bass, nylon guitar and slow strings on the left hand.
 - ❖ Phantom*: Flute
- ❖ **Register 4 (63):** Features orchestra strings on both hands.
 - ❖ Phantom*: Violin

- ❖ **Register 5 (64):** Features solo clarinet with soft brass on the right hand, and acoustic bass and soft brass on the left hand.
 - ❖ Phantom*: Clarinet

- ❖ **Register 6 (65):** Features solo trumpet with brass on the right hand, and acoustic bass and brass on the left hand.
 - ❖ Phantom*: Trumpet

- ❖ **Register 7 (66):** Features vibes with slow strings on the right hand, and acoustic bass and organ on the left hand.
 - ❖ Phantom*: Clarinet

- ❖ **Register 8 (67):** Features mandolin with strings on the right hand, and acoustic bass with clarinet (arpeggio) on the left hand.
 - ❖ Phantom*: Tremolo strings

Touch the Register 1 button. You should hear piano with slow strings. Notice the touch-sensitivity. The piano really comes alive with the touch feature! Turn off this feature by touching the button labeled touch. The red LED above the button will go off. Play the Concerto with the touch feature on and off and compare the difference. Touch sensitivity adds extra realism to many sounds.

Now touch the Register 2 button and try the great organ sound. Notice the touch button is off. For more realistic ORGAN sounds we recommend turning off this feature and using the using the expression pedal.

Try all of the factory settings and you will find they match most styles of music. Pay particular attention to Registers 5 and 6 as they feature solo sounds. Solo means there is an automatic split which plays the solo sound only on the highest note and other orchestra sounds are played on all other notes.

We suggest that after becoming familiar with the factory-set registers you learn how to select and create your own registers. Refer to Chapter 3, "Making and Recording Your Very Own Registers"

*** Phantom is a feature that brings a new (phantom) sound to the treble keyboard. This feature is presented in the next chapter.**



Chapter Three

Fixed Footswitches & Panel Buttons

In this chapter you will learn the functions of the two side switches on the expression pedal, the phantom pedal on the four-way pedal, and the buttons on the front of the Concerto.

Fixed Foot Switches

Expression Pedal

The expression pedal is equipped with two side switches. The left switch turns on and off the internal drum unit clock on the Concerto. Notice the LED above the start/stop button on the accordion flashes at the current tempo setting when the clock is off and remains steady when the clock is on. No drums will play unless your Concerto is connected to an external Midi drum unit.

The right switch on the expression pedal is a very powerful tool, which allows you the hands-free ability to sequence up to the next register. Set your Concerto at Register 1 and touch the right switch on the expression pedal. Notice the LED above the registers advances to the next register.

It is important to mention that Concerto has been painstakingly studied to provide you with the most natural musical effects. One of our achievements in producing natural effects is that the sound of any note held during a register change is not affected until the note is released and a new note played. This provides for a smooth and natural transition between register changes. Notice, there is a special

screen saver function that allows register changes to occur as fast as possible. When notes are played during a register change, the screen is not fully displayed which saves time and allows the register change to be immediate. If you wish to view the entire screen, simply touch the exit button and the full screen will be displayed.

Phantom

Phantom is a feature you will find invaluable no matter what your music ability. Phantom is an imaginary keyboard, or second sound, that allows you to carry on a dialogue between two separate instruments. Phantom also provides the ability to play a solo passage on notes other than those with *high note priority*, with phantom, notes up and down the scale may be played by the solo instrument.

To see how this feature works select factory-set Register 2. You now have a theater organ sound. Touch the "phantom" foot pedal (the first, or far left pedal on the four-way pedal) and the sound will change to a trumpet. Touch the "phantom" pedal again and you will return to the organ sound. The LED above the solo button will flash when phantom is on.

Now, with the phantom off touch any note on the keyboard. While holding that note (organ sound) touch the "phantom" foot switch and play a passage of notes above and below the original note. Note that these have a trumpet sound while the original note remains the organ. Now release all the notes and play a new passage. All of these notes will have a trumpet sound. Touch the "phantom" pedal (turning the phantom feature off) and any new notes return to the organ sound.

Four-way Foot Pedal

Foot pedal A (second pedal from the left) is set as a sustain pedal while in the factory songs. Foot pedal B (third pedal from the left) is sostenuto. To use the sostenuto effect you must first play a note(s), then before releasing it hold down the sostenuto pedal. The sostenuto pedal will sustain the notes for you allowing you to play non-sustained passages with only the pre-selected notes being sustained. Foot pedal C (far right pedal) is the soft damper pedal. This allows you to soften a passage on the right hand. The use of these pedals will be described later in this manual.

Panel Buttons

The buttons on the Concerto panel, or grill, are described below. See attachment A for a picture of Concerto with accompanying reference numbers. (Panel buttons will be italicized throughout these manuals).

Important: We have placed settings in your Concerto that should suffice for your immediate needs. We do not recommend you experiment with these settings until you read about them specifically in this manual.

#1. Split

There are four split settings, which are indicated by the following LED patterns:

- a. No split (no LED): All active sections play (solo plays only high notes).
- b. Split one (left LED on): High note is played only by solo section.
- c. Split two (right LED on): Same as split one, but three notes must be played before orchestra section sounds. This split allows solo legato passages to be played without the interference of the orchestra sections popping in between legato notes.
- d. Split three (both LED's on): This is first note priority for the solo section. Similar to phantom in that this is not high note priority. Different from phantom in which the solo sound is really struck after the first note; this is first note priority.

#2. Bass Range

There are two bass ranges to select from:

- a. Bass range one (left LED on): Lowest bass note is C ranging up to B.
- b. Bass range two (right LED on): Lowest bass note is F# below C with the highest note being F above C.

#3. Chord Range

There are three selections:

- a. Chord range one (left LED on): Chords are formed in the octave F# to F
- b. Chord range two (right LED on): Chords are formed in the octave C to B
- c. Chord range three (both LED's on): Chords are formed in the 1.5 octave range of F# to B3 forming open harmony.

#4. Arpeggio

There are four positions:

- a. Arpeggio off (no LED's): Chords are fixed.
- b. Arpeggio one (left LED on): Chords are automatically inverted upward in harmony with each strike. Striking a bass note starts the chord position at the beginning.
- c. Arpeggio two (right LED on): Chords are automatically inverted up once and repeated down once with each strike. Again striking a bass note starts the pattern from the beginning.
- d. Arpeggio three (both LED's on): Chords are automatically played in a pattern of invert up, up, up then down, down, down which when combined with a bass note forms a classical six step pattern. Try with 3/4 or 6/8 time signatures.

#5. Arr.

Reserved for future use.

#6. C. Hold

LEFT HAND REGISTER FREEZE

The C.HOLD button turns on and off this feature. When the C.HOLD button is on the left hand remains frozen to the current Song Register and as new Song Registers are recalled they are applied only to the right hand. While the Concerto is in this mode you can still make changes manually to the left hand and record new registers while the C.HOLD feature is on.

Example you may recall Factory Setting #2 (ORGAN) and then select C.HOLD and then Recall Factory Setting #1. You will then have the ORGAN on the left hand and the Piano & Strings on the Right hand (this could then be saved as a new register). Now release the C.HOLD function and press Factory Setting #1 again and you will have Acoustic Bass & Piano again in the left hand and the Song Registers will now apply to both Left and Right sides of the Concerto.

#7. T.Start

Reserved for future use.

#8. Select

Used to select screens, sub-menu screens, second functions such as manual drums, and record a register. Each function is discussed in detail under the appropriate sections later in this manual.

#9. Track

Used to access Manual Drum Sounds with pressed together with SELECT. Other functions reserved for future updates.

#10. Intro/End

Reserved for future use.

#11. Start/Stop

Start/stop internal Midi clock

#12. Exit

Exit performs several functions. First it exits any sub-menu and brings back the main screen. It also writes the screen, which may not be visible when recalled while playing. Exit is also used in conjunction with select to bring up the record menu to record a register.

#13. Trans

You may transpose the electronics of Concerto (and all attached midi gear) up or down half steps with the up or down arrow buttons. This is easily done in real time during performance. Note you must return the transpose to +O to play the acoustic accordion together with the electronics so that they are both in the same key.

#14. Bass

Volume for bass section

#15. Chord I

Volume for chord I. section

#16. Chord 2

Volume for chord 2 section

#17. Rhythm

Sends Program Change numbers 1 to 64 on Channel 10

#18. Solo

Volume for solo section

#19. Orch. 1

Volume for orchestra 1

#20. Orch. 2

Volume for orchestra 2

Additional Information about volume keys:**Volume Range**

There are 64 increments of volume ranging from 0 (volume off) to 64 (maximum volume). The volumes settings for all sections being played are indicated in the large display while the top display shows the volume setting momentarily while you are adjusting an individual instrument.

The Volume or “value” buttons are an important part of your Concerto. You will later learn that with different menu’s you can change the “value” or many different things such as changing the octave range of the section or selecting a new sound from the alphabetized “Library” of sounds.

You may want to spend some time practicing using the volume buttons. They have two speeds. If you touch the button momentarily the numbers will roll by slowly one at a time. If you hold the key down after about 2 seconds the numbers go into high gear and roll by very rapidly. The high-speed feature is to get you to the general range and the slow speed (touching the button and releasing) is for accuracy.

Section on/off:

When both up/down volumes of a section are depressed then the section is turned off. To turn on a section, simply touch either up or down for the desired section. **Example;** pressing both bass volume up and down together turns off the bass section, pressing either bass volume up or down turns the bass section back on again.

Other Functions

Important: Buttons 14 - 20 are also used as value keys for other menus. The only time they perform the descriptions above is during the main screen. Each button controls the information present in the screen. There are four rows of information in the screen and four rows of volume/value keys on each side of the screen. Each button controls the corresponding line of information in the display screen.

#21. Tempo

Adjusts the tempo of the internal Midi clock

#22. Reverb

Turns on and off the reverb effect on the entire instrument

#23. Chorus

Turns on and off the chorus effect for the entire instrument

#24. Touch

Turns on and off the keyboard touch sensitivity

Additional Information about Effects Buttons

Note: Other functions

The effects sections (buttons 22 - 24) also have sub-menus that are important to their function. To select these sub-menus simply hold select and then touch the effect you wish to select. For example, selecting reverb will bring up a reverb menu that will allow you to select the type and level of reverb for each section. Again exit brings you out of this menu. We will explore these features in further detail later.

#25. Bellows

Turns on and off the bellow expression. When bellows expression is engaged the expression is controlled by the bellows rather than by the expression pedal.

#26. Next

From/to (arrows left/right) turns the pages of the screen. There are three types of menus:

- a. Main menu: Includes volume (normal screen), octave, library, and velocity.

- b. Effect menu: Includes repeat, reverb, chorus, bellow, pedal 2, foot pedal A, foot pedal B, and foot pedal C.
- c. Global screens: These are used to set master tune, master reverb, chorus amounts, and constant bass. To select a global screen press select + next (again remember exit gets you out).

#22 - #58. Tone Bank

These are individual tone buttons grouped in eight families

#59. Song

There are three song positions


- a. Factory song (lower arrow): Eight factory-set registers
- b. User song (upper arrow): Buttons 43 - 50 are used to select user songs 1 - 8, and buttons 51 - 58 used to select user songs 9 - 16. Only buttons 27 - 43 can be used to change sound settings while in this mode.
- c. Tone select (no arrows): This position allows all the tone bank buttons to be used while in the user song mode. When in this mode the *user songs* cannot be changed.

#60-67. Song registers

Resister buttons 1 -8

(8-9) Manual Drums

Manual drums; a feature selected from the front panel by touching select (8) and track (9) together. To try this feature we suggest you begin with user register 1 and then recall the manual drums. You will then have a 41 (46 chromatic) note drum kit on the treble keyboard of the accordion that is TOUCH SENSITIVE. To exit touch the exit button to return to the normal playing mode.

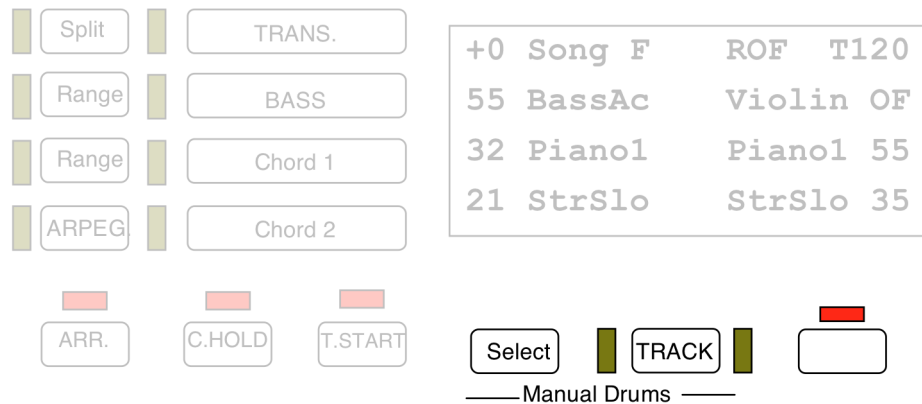

Additional Information about Small Display

(68 and 69) Small Display


The small display is your navigation guide – it tells you (68) what song bank you are on – and therefore you will know what bank of 8 registers you are playing (buttons 60 – 67) whether they are FACTORY or USER registers.

The display will show F for Factory (which is the normal position when you power up your Concerto).

When you select the USER song banks – (done with the SONG [59] button – turning on the top triangular LED indicating USER SONGS). The SONG BANKS are then selected with the row of buttons starting with 24, 33, 37, 41, 45, 49, 53, & 58. This row will select the USER SONGS 1 thru 8 and the small display will display the number of the BANK.

The second set of 8 USER Songs selected with the buttons just below the previous row – 25, 34, 38, 42, 46, 50, 54, & 58. This row selects banks 9 thru 16 but is displayed as 1. thru 8. (please pay attention to the dot (.) after the number this is indicating the second set of Bank Numbers.

Concerto Small Display

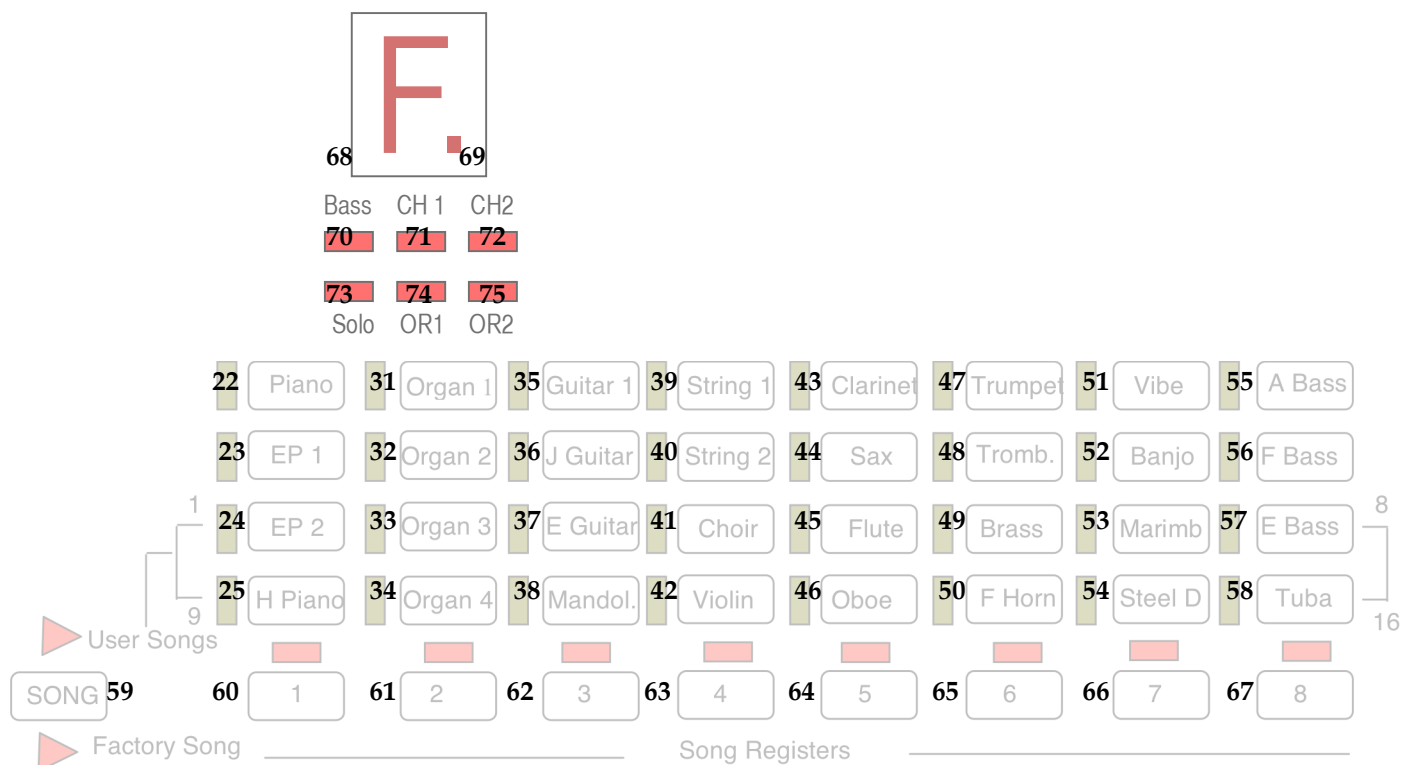



Chapter 4

Making and Recording Your Own Registers

In this chapter you will learn to record your own user registers. The ability to select sounds and record registers assists you in making your Concerto a very unique and personal instrument.

The following examples will lead you through the steps necessary to record user registers. Each example results in a different type or style of sound.

Example 1: Jazz Guitar with Strings

Step 1 Begin by selecting a factory song register, which is close to your desired style. A register that has many of the traits you already desire. This means you have far less work in creating the new register if much of the register is similar to what you desire.

After you have recorded your own user song registers, you may choose either one of these or a factory song register as the basis of a new register.


- a. In this example choose factory song register 1.
- b. Touch the orchestra 1 volume button
- c. Select jazz guitar - now assigned to orchestra 1
- d. Activate chord 1 and select jazz guitar again

You now have a jazz guitar on both the left hand chords and the right hand along with an acoustic bass. Using steps a through d practice making other changes.

Important when you select or touch a volume button you must change the volume setting to activate the section. We suggest you practice this so that when you touch a section button you only move the volume up or down by one number (example 55 to 56).

Step 2. Now you are ready to record your new register

a. Press both the **Select** and **Exit** together until you see a

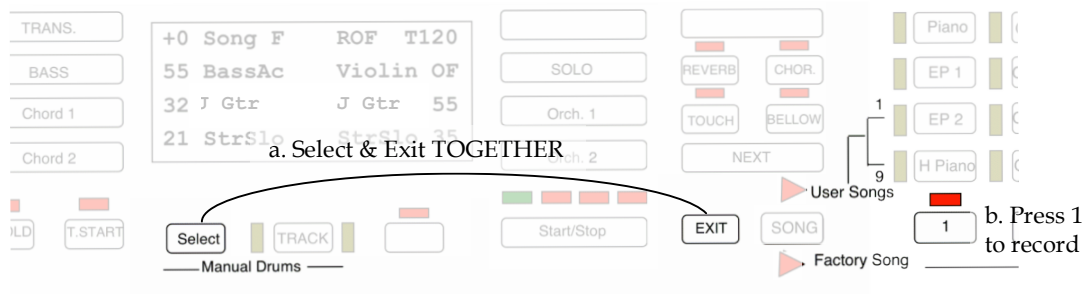

new screen appear. Since you were at factory song (which cannot be recorded over) Concerto has taken you to user song bank 1 (if you wish to select another bank then select it now [example - organ 3 button will recall song 2.

b. Now select register I to write. That is it you have recorded a new register.

Step 3. Recalling your new register.

- Press the song button until the user song arrow is lit
- Press user song bank 1 button (EP2)
- Press the desired register button 1- 8 (for this example 1 is where we recorded our new register and pressing 1 will now recall it)



Example 2: Jimmy Smith B3 organ with key click

- Step 1.** Selecting an appropriate register and then make selections and alterations (Since we are dealing with an organ register we will begin with factory song register 2).
- Select factory song 2
 - Select organ 2 on orchestra 1
 - Turn off the chorus effect button
- Step 2.** Now record this new setting on user song bank 1 register 2
- Press select and exit together
 - Select song bank 1 (if not selected press EP 1 button)
 - Press register 2 button to write

You have now completed and recorded two new registers on your Concerto!

Example 3: Banjo solo and guitar accompaniment on chord

- Step 1.** Selecting the sounds – For this register we will begin with factory song register 3 (Guitar), which is similar to a banjo.
- Select factory register 3
 - Select banjo on orchestral
 - Cancel orchestra2 (up and down volume together = off)
- Step 2.** Record to song bank 1 register 3 (remember you have 128 places to store your favorite settings located in 16 user song banks times 8 registers each).
- Press select/exit
 - Make sure song 1 is selected
 - Press register 3 to write

Example 4: Strauss waltz style

- Step 1.** Selecting the sounds

- a. Select factory register 4
- b. Select arpeggio #1 (left LED on next to arpeggio button)
- c. Raise volume of both chord 1 and chord 2 to about 50

Step 2 Record to song bank 1 register 4

- a. Press select/exit
- b. Select song 1
- c. Press register 4 to write

Recalling your registers

Once you have entered user song bank 1 you simply need press the register button to recall one of the 4 registers we have just recorded. If you have already recalled a register in that bank (example 2 the B3 organ) and wish to recall the banjo setting simply press register 3 (you do not need to press the song bank button as long as you do not wish to go to another song bank).

We are confident that with a little experimentation you will soon be creating many of your own personal combinations. Have fun experimenting.

If you wish to alter one of your user registers you may record over the original and save the new version. You may also copy registers by recalling them and then recording them to a new location. (This is a necessary step to avoid erasing a previously recorded register). This is especially useful in programming sequences of registers to perform a concert type arrangement. Using the sequence up switch on the side of the volume pedal will move you smoothly to the next register.



Chapter 5

Overall Settings & Archival Memory

About Archival Memory*

*NOTE - DA-100 Series Users See Appendix for Memory Card Instructions

It is really simple! You can either bring (RECALL) 64 registers UP to the ACCORDION or you can send (SAVE) 64 registers down to an archival position in the generator box.

Let's examine a little further - you have the ability to SAVE or RECALL 64 registers at one time. The 64 registers in the Accordion are labeled either <SONGS 1to 8> or they are <SONGS 9 to 16>.

The Archive positions are labeled as numbers <1, 2, 3 and so on> and depending on what was purchased in your accordion you have a minimum of 3 positions up to total possible 14 Archival positions. Should you be interested in purchasing more memory please contact Accordions International.

Below is a listing of how many archival positions are available with 1, 2, 3 or 4 memory units.

1 UNIT (Standard) provides 3 positions

2 UNITS (with 1 optional unit) provides a total of 7 positions

3 UNITS (with 2 optional units) provides a total of 10 positions

4 UNITS (with 3 optional units) provides a total of 14 positions

Now - back to the Archival positions - say you have 3 positions only in your Generator box. Then when you enter the ARCHIVAL SCREEN area, in the bottom half of the screen with the <ORCH 1> button you select the Archive positions and they will scroll only from 1 to 3 but should you have a second FLASH memory unit installed you will then have a total of 7 positions should you have 3 units installed you will then have 10 total archival positions and with all 4 units installed you will have the maximum of 14 positions - that is 14 X 64 registers or 896 total archival registrations (and combined with the 128 in the Concerto that is 1024 Registers) - more than even I would ever need.


It is best to think about ARCHIVAL MEMORY as you would think about storing your Christmas Decorations - Archive is a place to put away registers that may be specialty items such as 64 registers for Christmas songs.

Helpful hint! - It is very important that you keep a written log of your registers - and even making a title for all 64 registers as a group is a good idea - such as "Christmas Registers" then when you keep a written record and you archive them say you store them to Archive 3 and you develop 64 for Country Western and October-Fest and maybe another for weddings and parties. Then you can logically save 64 registers away with labels and for example have the following saved.

- Archive 1 = Weddings and Parties
- Archive 2 = Country Western and October-Fest
- Archive 3 = Christmas


SAVING and RECALLING Archival Registers

Archiving is simple all you need to do is follow the instructions in the Concerto's screen - below are the steps to SAVE or RECALL registers into archival memory.

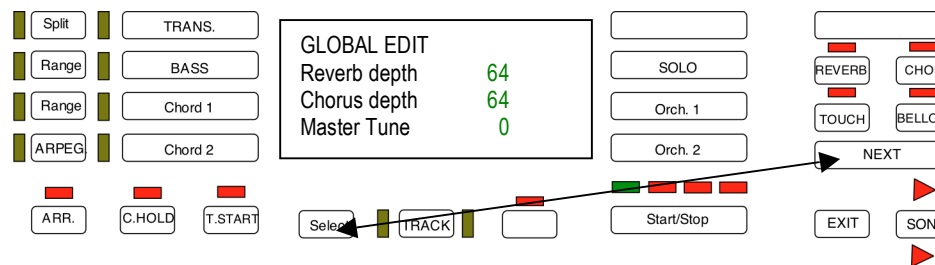

1. Enter the GLOBALS Screens, by pressing the SELECT and NEXT together until you see the global screen appear.

2. Step with the NEXT key until you see the ARCHIVE MEMORY screen

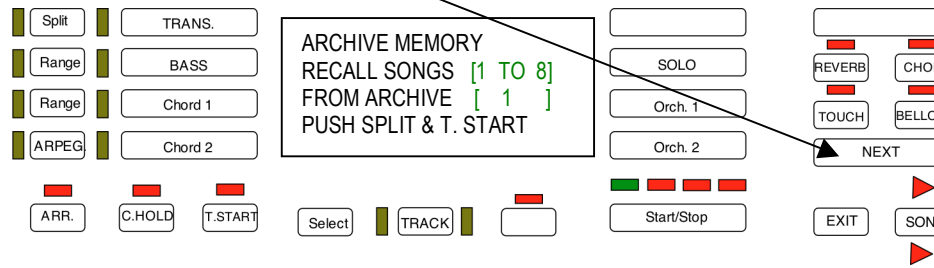

3. Follow the instructions in the screen.

4. Decide if you want to do by pressing the SOLO button < ▼ or ▲ >


RECALL SONGS 1 TO 8
 RECALL SONGS 9 TO 16
 SAVE SONGS 1 TO 8
 SAVE SONGS 9 TO 16

Note: You may want to SAVE the song registers in your accordion first before you RECALL song registers from the archive memory. Recalling means that you will erase and replace 64 registers in your accordion with 64 registers from the archive memory.

5. Then use the ORCH1 and press < ▼ or ▲ > to choose the desired archive 1, 2 or 3. Change to the archive you want to either RECALL or SAVE.

6. Double check and read the screen THREE TIMES -and make sure the statement is really what you want to do - remembering SAVE will save your registers to the selected archive location in your generator box - and RECALL means that you will replace the selected 64 registers in your accordion with the selected archive position. Once you are sure you have read it three times and are sure that you want to proceed then go on to the final step. Otherwise you may always press EXIT and abort the procedure.

7. Now that you are ready to either SAVE or RECALL the desired 64 registers - you simply press the SPLIT and T.START buttons together on your grill.

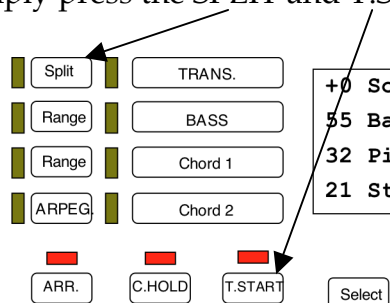

Master Settings

The following global settings are important depending on which sound engine you have in your Concerto Generator box. The settings below may need to be restored manually if your Concerto has experienced a static shock and has lost temporarily these settings.

First-generation Concerto DA-100 accordions

Global Reverb 64
Global Chorus 64
Master Tune 0


Second Generation Concerto DA-100 accordions

Global Reverb 110
Global Chorus 40
Master Tune 0

Concerto DA-250 accordions

Global Reverb 64
Global Chorus 40
Master Tune 0

To enter the global screens simply press the SELECT and NEXT keys together. Simply use the plus minus buttons on the right of the screen (SOLO, ORCH 1 and ORCH 2 buttons) to enter the desired values.

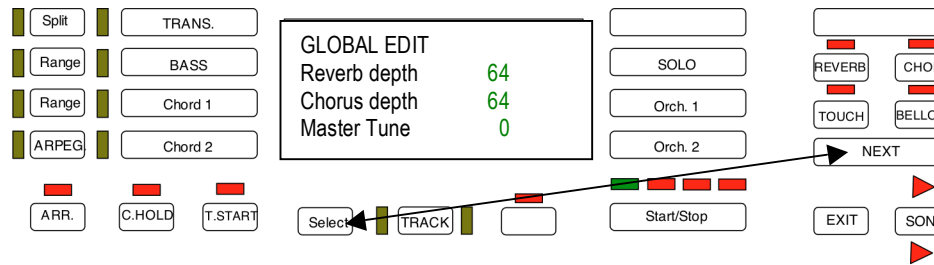

Global Reverb is a master reverb value that adds more or less reverb to all registers. As does Global Chorus – Master Tune adjusts the pitch of the Concerto electronics in 1000th steps of semi tone. That is 0 = concert pitch and each number every 100 steps is 10 cents above or below concert pitch. The total range of tuning is from -1000 to +1000. We recommend you leave tuning at 0 which is in tune with the Concerto reeds.

Some Final Notes

Now that you have learned the basics of your Concerto it is time to explore and experiment with all the possibilities available to you. Keep this manual as a handy reference.

Most importantly, have fun exploring, experimenting, and wowing your family, friends, and community with your new incomparable Concerto. We wish you lots of fun and happy years of enjoyment.

To clean your accordion we recommend Uncle Paul's Accordion Formula #1 and a clean micro fiber cloth. Spray the cloth and then wipe and restore the lustrous shine of your Concerto. Avoid spraying any cleaner or polish directly on the area's that are engraved on your Concerto as liquids may dissolve and wash away the decorative filling.

Thank you for owning a Concerto - you own a very special musical instrument that has been not only engineered with love and care - but has had much thought and design in creating the hand built Concerto you own. This has been a personal dream for me to offer to the world the Concerto accordion and I am proud that you have chosen to own the World's BEST Accordion!

All the best to you and if you have any questions please feel free to call me - it will be my pleasure to personally assist you. And again thank you for caring enough to own a Concerto!

Sincerely,

A handwritten signature in black ink that reads "PAUL PASQUALI". The signature is stylized with a large, looping flourish at the beginning.

Paul Pasquali
Accordions International
(Home of the Concerto)

APENDIX A

History of Concerto Software Upgrades.

Note: from time to time we have added and will continue to add features to the Concerto – below is a list of past releases and the features that have been added – note all these features are in your new Concerto DA-250. Please feel free to contact us about new updates from time to time.

Version 1.07 New Release

Version 1.07 provides several fixes as well as allows the Concerto to be compatible between sound engines including the new DREAM sound engine.

Also version 1.07 allows the pedal feature of both sequences UP and DOWN of Song Registers. You will find that now the Right butterfly switch on the Expression Pedal advances the Song Registers while the left butterfly switch decrements the Song Register to the previous Register.

If you require STOP/START to be on the floor with version 1.07 then an optional footswitch is available. Please contact your dealer or Accordions International.

Version 1.10c Release

Version 1.10c incorporates all previous upgrades including version 1.07 and provides two new features to the Concerto. The first is UP and DOWN volume of the Section Buttons (Bass, Solo, ORCH 1, etc.) has been changed. Now when the volume reaches the lowest or highest level it stops at either 0 or 63 and does not wrap around and cycle again. Also, the GS Bank Select is now implemented on the Footswitch programs.

The most significant feature of is the Left Hand HOLD function. The C.HOLD button turns on and off this feature. When the C.HOLD button is on the left hand remains frozen to the current Song Register and as new Song Registers are recalled they are applied only to the right hand. While the Concerto is in this mode you can still make changes manually to the left hand and record new registers while the C.HOLD feature is on.

Example you may recall Factory Setting #2 (ORGAN) and then select C.HOLD and then Recall Factory Setting #1. You will then have the ORGAN on the left hand and the Piano & Strings on the Right hand (this could then be saved as a new register). Now release the C.HOLD function and press Factory Setting #1 again and you will have Acoustic Bass & Piano again in the left hand and the Song Registers will now apply to both Left and Right sides of the Concerto.

Accordions International
1760 South 450 West
Salt Lake City, UT 84115
www.AccordionInfo.com
Phone 801-485-5840

Version 1.10D Release

Version 1.10D incorporates the GS PAN effect. This allows the sound for each of the musical sections of the Concerto to be PANNED in the STEREO field from LEFT (0) to RIGHT (63) with Center being (32). To access and adjust the PAN feature in the default mode simply press the NEXT key until you see PAN in the upper left corner of the display. The PAN setting is then displayed for each section. Simply change the number from 0 to 64 to adjust the PAN for each section desired.

The PAN values are specific for each REGISTER – this means you can save the settings in a USER REGISTER and each USER REGISTER can have its very own PAN settings.

NOTE – YOU MUST HAVE A STEREO SOUND SYSTEM TO HEAR THE STEREO PAN EFFECT!

Version 1.11b Gateway to DA-250 Release

Version 1.11B incorporates all the previous versions and is the first release for the Concerto DA-250. The major change here is the new generator box and this software is the gateway interface to the new DA-250 Generator box including the FLASH ARCHIVAL MEMORY replacing the memory cards of the DA-250 generator. The advantages are added power, quieter design, better sound, greater memory capacity and the fact that the memory is not dependent on battery power. Archival memory is more secure and stable with this new technology.

You may save SONG Banks 1 to 8 OR 9 to 16 from the accordion to the ARCHIVE as well as recall archive memory back to SONG Banks 1 to 8 or 9 to 16 in the accordion

Enter the GLOBAL Screens – Press SELECT and NEXT together until you see the global screen appear

Step with the NEXT key until you see the archive memory screen and follow the instructions in the screen. The generator box is shipped with 3 archive positions and is expandable to 14 positions.

To SAVE 64 Registers created in your Concerto

Step 1 – Enter Archive Menu – See instructions above with SELECT & NEXT

Step 2 – Select with SOLO button – UP or DOWN Select the 64 Registers you want to save either [SAVE SONGS 1-8] or [SAVE SONGS 9-16]

Step 3 - Select the archive location to save your 64 registers use the ORCH 1 button, either 1, 2 or 3 (optional memory locations to 14).

Step 4 – When you have completed making your selection of 64 registers to SAVE and also selected the archive location PRESS [SPIT] and [T START] and wait for your Concerto to load up to 64 as is transfers the data.

Step 5 – When the data transfer reaches 64 the Archive Screen returns – you may either save or recall more groups of 64 registers or press [EXIT] to exit the archive menu.

TO RECALL 64 Registers saved in your Concerto Sound Module

Step 1 – Enter Archive Menu – See instructions above with SELECT & NEXT

Step 2 – Select with SOLO button – UP or DOWN Select the 64 Registers you want to RECALL (bring up to your Concerto) by selecting either [RECALL SONGS 1-8] or [RECALL SONGS 9-16]

Step 3 – Now select the archive location where you want to recall your 64 registers from by using the ORCH 1 button, either 1, 2 or 3 (optional memory locations to 14).

Step 4 – When you have completed making your selection of the archival location to recall 64 registers to RECALL and also selected the archive location PRESS [SPIT] and [T START] and wait for your Concerto to load up to 64 as is transfers the data.

Step 5 – When the data transfer reaches 64 the Archive Screen returns – you may either save or recall more groups of 64 registers or press [EXIT] to exit the archive menu.

Accordions International
1760 South 450 West
Salt Lake City, UT 84115
www.AccordionInfo.com
Phone 801-485-5840

Model DA-255 Release

X2 – Additional NEW Sound Samples Added

OR – Theater Organ Library of Sounds Added

NEW Factory Registers Featuring New Sounds Added

Version 1.30p – Adds the X2 and OR libraries to the Concerto. See Appendix B DA-255 Complete Sound List for a complete listing of sounds now included in the Concerto alphabetical libraries.

Various items are updated for superior performance in this release and it is full backwards compatible with any registers previously saved in your Concerto 200 series accordion. With the exception of the Mandolin sound which now incorporates a repeating sample. Any register previously saved with the mandolin sound may need to have the auto repeat feature turned off and the register resaved without the auto repeat.

The 1.30p DA-255 release now features several double sounds (two sounds layered together) as well as several dynamic sounds (soft touch on keyboard plays first sound while a harder touch on the keyboard plays a second sound in the same patch).

Accordions International
1760 South 450 West
Salt Lake City, UT 84115
www.AccordionInfo.com
Phone 801-485-5840

APPENDIX B

Concerto DA-250

Sound List & Drum Charts

On page 34 starts the library list of sounds contained in your Concerto DA-255 accordion. Please note that the chart contains under the word Display the exact name as it appears in your Concerto display screen. The list is also in the same alphabetical order as they appear in the display for each section of the library.

The first column is the LIBRARY column tell the name of the library these are:

AC = Accordion samples

EX = Extra Sounds to the GS Library

GS = General Synth sound list - the major listing of sounds

X2 = NEW DA-255 Library including some double sounds and dynamic sounds!

OR = NEW DA-255 Library of theater organ sounds

The second and third columns are the Patch Change and Bank Number sent by your Concerto for the sound listed on that row.

IMPORTANT Please note that the Patch Change numbers listed in the PC column are midi PC numbers from 0-127. When you want to program your pedals you may simply use the PC and Bank numbers as they appear in the chart! Making it much easier to enter the sound information to the footswitches of your Concerto!

Full Name - this is a full description for the sound in that row. Please note that some of the new sounds are dual sounds and some are dynamic sounds. Dual sounds are layered sounds like Guitar and Strings or Jazz Guitar and Vibes.

Notes - This is place for you to make notes about each of the sounds in your Concerto - you might want to add a notes about particular sounds as you hear them and experiment with them to help you make new and better registers.

LB	PC	B	Display	Full Name	Notes
AC	3	32	Accor1	Double Basson Accordion (16+16+8)	
AC	7	32	Accor2	Accordion (16+8+8)	
AC	24	32	AmerTr	American Tremolo (8+8)	
AC	4	32	Bandn1	Bandon1	
AC	5	32	Bandn2	Bandon2	
AC	35	32	Bass_1	Accordion Bass 1	
AC	36	32	Bass_2	AccordionBass2	
AC	33	32	BassDi	Diatonic Bass	
AC	2	32	BassnD	Double Basson 2 (16+16+8)	
AC	0	32	Basson	Bassoon	
AC	20	32	Bright	Brilliant	
AC	1	32	Cassot	Cassotto	
AC	22	32	Celest	Celeste	
AC	37	32	Chord1	Accordion Chord 1	
AC	38	32	Chord2	Accordion Chord 2	
AC	39	32	Chord3	Accordion Bass 3	
AC	34	32	ChrdDi	Diatonic Chord	
AC	29	32	Clarín	Clarinet	
AC	32	32	Diaton	Diatonic	
AC	30	32	Flute	Flute	
AC	18	32	French	French	
AC	10	32	Harmon	Harmonium (16+8+4)	
AC	8	32	Horn	Horn	
AC	19	32	Italia	Italian Accordion	
AC	11	32	Mastr1	Master 1	
AC	12	32	Mastr2	Master 2	
AC	13	32	Mastr3	Master 3	
AC	14	32	Mastr4	Master 4	
AC	15	32	Mastr5	Master 5	
AC	16	32	Mastr6	Master 6	
AC	26	32	Mus+Pc	Musette+Piccolo (8+8+4)	
AC	17	32	Musett	Musette (8+8+8)	
AC	27	32	Oboe1	Oboe1 (8+4)	
AC	28	32	Oboe2	Oboe 2 (8+4)	
AC	9	32	Organ	Organ (16+4)	
AC	31	32	Piccol	Piccolo	
AC	25	32	TangoA	Tango Accordion	
AC	23	32	Tremol	Tremolo (Italian Tremolo Violin)	
AC	6	32	TubaFs	Tuba Fisa (Austrian Tremolo)	
AC	21	32	Violin	Violin (American Tremolo)	
EX	99	8	Atms_2	Atmosphere 2	
EX	32	8	BasAc3	Acoustic Bass 3	
EX	33	8	BasBig	Big Bass	
EX	34	16	Bass_8	Bass 8	
EX	123	3	Bird_2	Birds 2	
EX	61	16	BrsBig	Big Brass 1	
EX	34	8	Bs16+8	Bass 16+8	

LB	PC	B	Display	Full Name	Notes
EX	33	16	BsBigS	Big Bass Sustain	
EX	87	8	BsLd2	Bass Lead 2	
EX	32	16	BsRide	Bass + Ride Cymbal	
EX	52	8	ChoirB	Big Choir	
EX	52	16	ChoirS	Choir+Strings 1	
EX	14	9	ChrchB	Church Bell 2	
EX	71	16	Clar_2	Clarinet Section	
EX	102	2	EchPn	Echo Pan	
EX	4	24	EP60s	Mix E.Piano	
EX	4	16	EPSoft	Soft E.Piano	
EX	88	16	Fant_2	Fantasy 2	
EX	73	8	FlutJz	Recorder	
EX	60	8	FrnHr2	French Horn 2	
EX	60	16	FrnHr3	Horn Section	
EX	101	8	Ghost	Ghost	
EX	68	16	Oboe2	English Horn	
EX	88	8	OrchBl	Orchestra Bell	
EX	16	16	Org_60	60 Organ	
EX	17	16	Organ4	Detune Organ 2	
EX	16	14	OrgLw1	Theatre Organ 1	
EX	16	15	OrgLw2	Theatre Organ 2	
EX	17	14	OrgLw3	Tibia 16 & 4	
EX	17	15	OrgLw4	Tibia 16 & 4 Tremolo	
EX	18	14	OrgLw5	Chapel Organ	
EX	18	15	OrgLw6	Tibia 8 & 4 Tremolo	
EX	19	14	OrgLw7	Lower Organ	
EX	19	15	OrgLw8	Vox 8 Tremolo	
EX	18	16	OrgODr	Organ Drawbar	
EX	19	16	OrPipe	Church Organ 3	
EX	0	8	Piano5	Grand Piano 2	
EX	0	16	PianoS	Grand Piano+Strings	
EX	18	8	RckOrg	Rock Organ	
EX	65	8	SaxAt1	Alto Sax 2	
EX	65	16	SaxAt2	Circus Sax	
EX	66	8	SaxNit	Night Sax	
EX	66	16	SaxTn2	Tenor Sax Vibrato	
EX	49	8	StrgOc	Octa Strings 1	
EX	118	9	SynDr3	Syn drum 3	
EX	57	8	Trmb2	Mellow Trombone	
EX	57	16	Trmb3	Trombone 3	
EX	56	16	Trmpt2	Trumpet3	
EX	59	16	TrpMtd	Muted Trumpet 2	
EX	14	16	TubBel	Tubular Bells	
EX	40	8	Violn2	Violin 2	
EX	85	8	VoiceS	Voice Sust.	
EX	126	6	Yeah	Yeah	

LB	PC	B	Display	Full Name	Notes
GS	86	0	5thSaw	Fifths	
GS	118	8	808Tom	Syn Drum 2	
GS	21	0	Acc_Fr	Musette	
GS	21	8	Acc_It	Master	
GS	113	0	Agogo	Agogo	
GS	126	0	Aplaus	Applause	
GS	99	0	Atmosp	Atmosphere 1	
GS	109	0	BagPip	Bagpipe	
GS	23	0	Bandon	Tango Accordion	
GS	105	0	Banjo	Banjo	
GS	32	0	BassAc	Acoustic Bass 1	
GS	33	0	BassFn	Finger Bass 1	
GS	35	0	BassFr	Fretless Bass 1	
GS	70	0	Basson	Clarinet	
GS	34	0	BassPc	Pick Bass	
GS	14	8	BellCh	Church Bell	
GS	14	0	BellTb	Chimes	
GS	123	0	Bird	Birds	
GS	76	0	Bottle	Blow Bottle	
GS	92	0	Bow_Gl	Bowed	
GS	61	0	Brass1	Brass	
GS	61	8	Brass2	Soft Brass 3	
GS	121	0	Breath	Breath Noise	
GS	100	0	Bright	Brightness	
GS	62	0	BrsSy1	Synth Brass 1	
GS	63	0	BrsSy2	Synth Brass 2	
GS	62	8	BrsSy3	Synth Brass 3	
GS	63	8	BrsSy4	Synth Brass 4	
GS	87	0	Bs & L	Bass Lead 1	
GS	122	5	Bubble	Bubble	
GS	125	9	Burst	Burst Noise	
GS	125	3	CarPas	Car Pass	
GS	125	2	CarStp	Car Break	
GS	115	8	Castnt	Castanet	
GS	8	0	Celest	Celesta	
GS	42	0	Cello	Cello	
GS	84	0	Charng	Charang	
GS	83	0	ChfrLd	Chiff	
GS	124	5	Chime	Wind Chime	
GS	52	0	ChoirA	Choir Aah	
GS	53	0	ChoirO	Scat Voice	
GS	71	0	Clarnt	Clarinet Vibrato	
GS	7	0	Clavcd	Clavinet	
GS	116	8	Con.BD	Concert Bass Drum	
GS	43	0	Contra	Contrabass	
GS	125	4	Crash	Car Crash	
GS	124	2	Creak	Door Open	

LB	PC	B	Display	Full Name	Notes
GS	98	0	Crystl	Crystal	
GS	123	1	Dog	Dog	
GS	124	3	Door	Door Close	
GS	102	0	Echo D	Echoes	
GS	69	0	EngHrn	Bassoon	
GS	125	1	Engine	Car Start	
GS	4	0	EP_1	E. Piano 1	
GS	5	0	EP_2	E.Piano 2	
GS	4	8	EP_dt1	E.Piano 3	
GS	5	8	EP_dt2	Detune E.Piano2	
GS	127	3	Explsn	Explosion	
GS	88	0	Fantas	Fantasy 1	
GS	110	0	Fiddle	Fiddle	
GS	73	0	Flute	Jazz Flute	
GS	126	5	FootSt	Foot Step	
GS	60	0	FrHorn	French Horn 1	
GS	123	2	Gallop	Horse	
GS	9	0	Gloken	Glockenspiel	
GS	101	0	Goblin	Goblins	
GS	25	0	Gt_12S	Steel Guitar	
GS	27	8	Gt_Chr	Clean Guitar 2	
GS	120	1	Gt_Cut	Guitar Cut Noise	
GS	30	0	Gt_Dis	Distortion Guitar	
GS	31	8	Gt_FB	Guitar Feed Back	
GS	30	8	Gt_Fdb	Feed Back Guitar	
GS	28	8	Gt_Fnk	Funk Guitar 1	
GS	120	0	Gt_Frt	Guitar Fret Noise	
GS	24	0	Gt_Nyl	Nylon Guitar	
GS	31	0	GtHrmn	Guitar Harmonics	
GS	26	0	GtJazz	Jazz Guitar	
GS	28	0	GtMutd	Muted Guitar	
GS	29	0	GtOvdr	Overdrive Guitar	
GS	27	0	Guitar	Clean Guitar 1	
GS	127	0	GunSht	Gun Shot	
GS	94	0	HaloPd	Halo	
GS	6	8	HarCpl	Harpsichord 2	
GS	22	0	Harmon	Harmonica	
GS	46	0	Harp	Harp	
GS	6	0	Harpsc	Harpsichord 1	
GS	26	8	Hawaii	Hawaiian Guitar 1	
GS	126	4	HeartB	Heart Beat	
GS	125	0	Helicp	Helicopter	
GS	3	0	HonkyT	Honky Tonk	
GS	96	0	Ice Rn	Rain	
GS	125	7	Jet	Jet	
GS	108	0	Kalimb	Kalimba	
GS	121	1	KeyClk	Key Click	

LB	PC	B	Display	Full Name	Notes
GS	107	0	Koto	Koto 1	
GS	127	2	LaserG	Laser Gun	
GS	126	1	Laugh	Laughing	
GS	127	1	MachnG	Machine	
GS	25	16	Mandol	Mandolin	
GS	12	0	Marimb	Marimba	
GS	117	0	MeloT1	Melodic Tom 1	
GS	117	8	MeloT2	Melodic Tom 2	
GS	93	0	MetlPd	Metallic	
GS	10	0	MusBox	Music Box	
GS	68	0	Oboe	Oboe	
GS	79	0	Ocarin	Ocarina	
GS	55	0	OrchHit	Orchestra Hit	
GS	48	8	Orchst	Orchestra	
GS	20	0	Org_Rd	Reed Organ	
GS	16	0	Organ1	Drawbar Organ	
GS	17	0	Organ2	Jazz Organ 3	
GS	18	0	Organ3	Rock Organ 3	
GS	19	0	OrgCh1	Church Organ 1	
GS	19	8	OrgCh2	Church Organ 2	
GS	16	8	OrgDt1	Detune Organ 1	
GS	17	8	OrgDt2	Jazz Organ 4	
GS	75	0	PanFlt	Pan Flute	
GS	0	0	Piano1	Grand Piano	
GS	1	0	Piano2	Bright Piano	
GS	2	0	Piano3	El.Grand Piano	
GS	72	0	Piccolo	Flute	
GS	90	0	PolySy	Polisynth	
GS	126	3	Punch	Punch	
GS	122	1	Rain	Rain	
GS	119	0	RevCym	Reverse Cymbal	
GS	15	0	Santur	Dulcimer	
GS	81	0	SawWav	Saw Tooth	
GS	65	0	SaxAlt	Alto Sax 1	
GS	67	0	SaxBar	Baritone Sax	
GS	64	0	SaxSop	Soprano Sax	
GS	66	0	SaxTen	Tenor Sax	
GS	126	2	Scream	Screaming	
GS	124	4	Scrтч	Scratch	
GS	122	0	Seashr	Sea Shore	
GS	77	0	Shaku.	Shakuhachi	
GS	106	0	Shamsn	Shamisen	
GS	111	0	Shanai	Shanai	
GS	80	8	SinWav	Syn Wave	
GS	125	5	Siren	Police	
GS	104	0	Sitar	Sitar	
GS	36	0	SlapB1	Slap Bass 1	

LB	PC	B	Display	Full Name	Notes
GS	37	0	SlapB2	Slap Bass 3	
GS	97	0	SndTrx	Soundtrack	
GS	85	0	SoloVx	Voice	
GS	91	0	Space	Choir	
GS	80	0	SqrWav	Square 1	
GS	125	8	StarSh	Star Ship	
GS	103	0	StarTh	Sci-fi	
GS	114	0	SteelD	Steel Drum	
GS	122	4	Stream	Stream	
GS	48	0	Strngs	Strings Ensemble 1	
GS	45	0	StrPiz	Pizzicato	
GS	49	0	StrSlo	Strings Ensemble 2	
GS	120	2	StrSlp	String Slap	
GS	50	0	StrSy1	Synth Strings 1	
GS	51	0	StrSy2	Synth Strings 2	
GS	50	8	StrSy3	Synth Strings 3	
GS	44	0	StrTrm	Tremolo Strings	
GS	95	0	SwepPd	Sweep	
GS	82	0	SyCali	Calliope	
GS	38	0	Syn_B1	Synth Bass 1	
GS	39	0	Syn_B2	Synth Bass 2	
GS	38	8	Syn_B3	Synth Bass 3	
GS	39	8	Syn_B4	Synth Bass 4	
GS	118	0	SynDrm	Syn Drum 1	
GS	54	0	SynVox	Synth Voice	
GS	116	0	Taiko	Taiko Drum	
GS	107	8	Taisho	Koto 2	
GS	124	0	Tele_1	Telephone 1	
GS	124	1	Tele_2	Telephone 2	
GS	122	2	Thundr	Thunder	
GS	47	0	Timpan	Timpani	
GS	112	0	TinklB	Tinkbell	
GS	125	6	Train	Train	
GS	57	0	Trombn	Trombone 1	
GS	59	0	TrpMtd	Muted Trumpet	
GS	56	0	Trumpt	Trumpet	
GS	58	0	Tuba	Tuba	
GS	24	8	Ukulel	Nylon Guitar 2	
GS	11	0	Vibes	Vibes	
GS	41	0	Viola	Viola	
GS	40	0	Violin	Violin 1	
GS	89	0	WarmPd	Warm Pad	
GS	78	0	Whistl	Whistle	
GS	122	3	Wind	Wind	
GS	115	0	WoodBl	Wood Block	
GS	13	0	Xyloph	Xylophone	
OR	19	31	KinGlc	Tibia 8 Trem + Kinura 8 + Glock	

LB	PC	B	Display	Full Name	Notes
OR	26	31	Kinur2	Tibia 8 Trem + Kinura 8	
OR	27	31	Kinur3	Tibia 8 & 2 2/3 Trem + Kinura 8	
OR	40	31	Kinur4	Kinura 8	
OR	41	31	Kinur5	Kinura 8 + Trem	
OR	21	31	OrPHr1	Tibia 8 Trem + Post Horn 8	
OR	22	31	OrPHr2	Tibia 8 & 4 Trem + PosHor 8	
OR	38	31	OrPHr3	Organ Post Horn	
OR	39	31	OrPhr4	Organ Post Horn + Trem	
OR	36	31	OrTmp2	Organ Trumpet 8	
OR	37	31	OrTmp3	Organ Trumpet 8 w/Trem	
OR	20	31	OrTmpt	Tibia 8 Trem + Trumpet 8 Trem	
OR	23	31	OrVox1	Tibia 8 Trem + Vox 8 Trem	
OR	24	31	OrVox2	Tibia 8 & 4 Trem + Vox Trem	
OR	33	31	PHrTmp	Post Horn + Trumpet	
OR	34	31	PhTmp2	Post Horn + Trumpet + Kinura	
OR	35	31	PhTmp3	Post Horn + Trumpet + Kinura Trem	
OR	14	31	ThrOrg	Theatre Organ 1	
OR	15	31	ThOrg2	Theatre Organ 2	
OR	17	31	ThOrGl	Theater Organ Tibia 8 Trem + Glock	
OR	0	31	ThOrgn	Theather Organ Tibia 16 & 4 Trem	
OR	1	31	TOrgn3	Tibia 16 & 8 Trem	
OR	2	31	TOrgn4	Tibia 16 & 4 & 2 Trem	
OR	3	31	TOrgn5	Tibia 16 & 8 & 4 Trem	
OR	4	31	TOrgn6	Tibia 16 & 8 & 4 & 2 Trem	
OR	5	31	TOrgn7	Tibia 16 & 2 2/3 Trem	
OR	6	31	TOrgn8	Tibia 16 & 8 & 2 2/3 Trem	
OR	7	31	TOrgn9	Tibia 16 & 4 & 2 2/3 Trem	
OR	8	31	TOrg10	Tibia 16 & 8 & 4 & 2 2/3 Trem	
OR	9	31	TOrg11	Tibia 16 & 8 & 3 1/5 Trem	
OR	10	31	TOrg12	Tibia 8 & 1 3/5 Trem	
OR	11	31	TOrg13	Tibia 8 & 2 2/3 & 1 3/5 Trem	
OR	12	31	TOrg14	Tibia 16 & 6 2/5 & 8 & 4 & 2 Trem	
OR	13	31	TOrg15	Tibia 16 & 6 2/5 & 8 & 4 & 2 2/3 Trem	
OR	16	31	TOrg16	Tibia 16 & 8 & 4 Trem + PH8 Trem	
OR	18	31	TOrg17	Tibia 8 & 4 & 2 w/ Tremolo	
OR	25	31	TOrg18	Tibia 8 Trem	
OR	28	31	TOrg19	Tibia 8 & 4 Trem	
OR	29	31	TOrg20	Tibia 8 & 2 Trem	
OR	30	31	TOrg21	Tibia 8 & 4 & 2 Trem	
OR	31	31	TOrg22	Tibia 8 & 4 & 2 2/3 Trem	
OR	18	17	TOrg23	Tibia 8 Tremolo	
OR	42	31	VoxHum	Vox Humana 8	
OR	43	31	VoxTrm	Vox 8 Trem	
X2	126	7	1_One	One	
X2	126	8	2_Two	Two	
X2	126	9	3Three	Three	
X2	126	10	4_Four	Four	

LB	PC	B	Display	Full Name	Notes
X2	32	1	BasAc2	Acoustic Bass 2	
X2	61	3	Brass3	Soft Brass 1	
X2	61	4	Brass4	Soft Brass 2	
X2	61	9	Brass5	Soft Brass 4	
X2	61	24	BrsBg2	Big Brass 2	
X2	61	25	BrsBg3	Big Brass 3	
X2	61	26	BrsBg4	Big Brass 4	
X2	33	1	BssFn2	Finger Bass 2	
X2	33	2	BssFn3	Finger // Slap Bass	
X2	33	3	BssFn4	Finger Bass 3	
X2	35	8	BssFr2	Fretless Bass 2	
X2	52	25	ChoOrg	Choir + Principal 8	
X2	52	17	ChrSt2	Choir+Strings 2	
X2	52	4	ChrVox	Choir Aah + Voice	
X2	71	8	ClrnMI	Circus Clarinet	
X2	71	24	ClrnSc	Piccolo	
X2	71	4	ClrnVb	Mellow Clarinet	
X2	7	8	ClvFnk	Funky Clavinet	
X2	4	7	EP_dt3	Detune E.Piano1	
X2	5	16	EP_St1	E.Piano 2 + Strings	
X2	5	24	EP_Vox	E.Piano 2 + Voice	
X2	60	17	FlugHr	Flugel Horn	
X2	25	8	Gt_12S	12 Strings	
X2	27	24	Gt_60s	60 s Guitar	
X2	24	16	Gt_Str	Nylon Guitar+Strings	
X2	26	24	GtCntr	Country Guitar	
X2	30	16	GtDis2	Distorted Guitar Vibr.	
X2	27	16	GtElec	Electric Guitar	
X2	28	16	GtFnk2	Funk Guitar 2	
X2	26	1	GtJaz2	Jazz Guitar 2	
X2	26	4	GtJaz3	Double Jazz Guitar 1	
X2	26	5	GtJaz4	Double Jazz Guitar 2	
X2	26	6	GtJzVb	Jazz Guitar + Vibes	
X2	22	8	HarBlu	Blues Harmonica	
X2	26	16	Hawai2	Hawaiian Guitar 2	
X2	6	16	HrpStr	Harpsi + Strings	
X2	18	20	Kinura	Kinura 8 + Tremolo	
X2	25	16	Mando2	Mandolin 2	
X2	12	8	Marim2	Marimba 2	
X2	48	25	OrcFlt	Orchestra + Flute	
X2	48	16	OrchDy	Dynamic Orchestra	
X2	48	28	OrcHr2	Orchestra + Horn 2	
X2	48	27	OrcHrn	Orchestra + Horn 1	
X2	48	26	OrcObo	Orchestra + Oboe	
X2	16	18	OrCool	Cool Organ	
X2	19	24	OrDChr	Church Org./Dynamic Choir	
X2	33	24	OrgBs1	Organ Bass 1	

LB	PC	B	Display	Full Name	Notes
X2	34	24	OrgBs2	Organ Bass 2	
X2	52	24	OrgCho	Choir + Organ	
X2	16	13	OrgClk	Click Organ	
X2	16	17	OrgRck	Rock Organ 1	
X2	16	22	OrgRtr	Rotor Organ	
X2	16	23	OrGspl	Gospel Organ	
X2	18	22	OrgTpt	Organ Trumpet 8	
X2	16	26	OrJazz	Jazz Organ 2	
X2	16	27	OrRck2	Rock Organ 2	
X2	0	24	PiaOc1	Octa Piano 1	
X2	0	25	PiaOc2	Octa Piano 2	
X2	54	8	PopVox	Pop Voice	
X2	18	25	PstHrn	Post Horn Tremolo	
X2	81	1	SawTth	Saw Tooth 2	
X2	66	24	SaxSc1	Sax Section 1	
X2	66	25	SaxSc2	Sax Section 2	
X2	66	26	SaxSc3	Sax Section 3	
X2	54	16	SftPad	Soft Pad	
X2	36	8	SlapB3	Slap Bass 2	
X2	37	8	SlapB4	Slap Bass 4	
X2	80	1	SqrWv2	Square 2	
X2	49	19	StAcc2	Accomp. Strings 2	
X2	49	18	StrAcc	Accomp. Strings 1	
X2	49	16	StrEns	Strings Ensemble 3	
X2	49	17	StrOct	Octa Strings 2	
X2	52	18	StrVox	Strings + Voice	
X2	38	16	Syn_B5	Synth Bass 5	
X2	81	8	SynFlt	Syn Flute	
X2	18	24	TibChr	Tibia 8 Trem + Chrysoglott	
X2	18	18	Tibi16	Tibia 16 & 2 Tremolo	
X2	18	19	Tibia8	Tibia 8 Trem+Post Horn 8	
X2	18	21	TibVox	Tibia 8 Trem+Vox 8 Trem	
X2	16	20	ToneWh	Tone Weel	
X2	57	24	TrmbSf	Soft Trombone	
X2	56	8	Trmpt3	Trumpet2	
X2	57	4	Tromb4	Trombone 2	
X2	58	8	Tuba_2	Tuba 2	
X2	32	31	VibOrg	Tibia 8 Trem w/Vibe	
X2	18	23	VoxTrm	Vox 8 Tremolo	

Concerto Drum Sounds Chart A

Note	STANDARD PC=1	ROOM PC=9	POWER PC=17	ELECTRIC PC=25	TR-808 PC=26
24 - C1	Fingers Snap Left	Fingers Snap Left	Fingers Snap Left	Fingers Snap Left	Fingers Snap Left
25 - C#1	Finger Snap Right	Finger Snap Right	Finger Snap Right	Finger Snap Right	Finger Snap Right
26 - D1	Snare Roll	Snare Roll	Snare Roll	Snare Roll	Snare Roll
27 - D#1	High Q	High Q	High Q	High Q	High Q
28 - E1	Slap	Slap	Slap	Slap	Slap
29 - F1	Scratch Push	Scratch Push	Scratch Push	Scratch Push	Scratch Push
30 - F#1	Scratch Pull	Scratch Pull	Scratch Pull	Scratch Pull	Scratch Pull
31 - G1	Sticks	Sticks	Sticks	Sticks	Sticks
32 - G#1	Square Click	Square Click	Square Click	Square Click	Square Click
33 - A1	Metron. Click	Metron. Click	Metron. Click	Metron. Click	Metron. Click
34 - A#1	Metron. Bell	Metron. Bell	Metron. Bell	Metron. Bell	Metron. Bell
35 - B1	Bass Drum 2	Bass Drum 2	Bass Drum 2	EI. Bass Drum 2	808 Bass Drum 2
36 - C2	Bass Drum 1	Bass Drum 1	Bass Drum 1	EI. Bass Drum 1	808 Bass Drum 1
37 - C#2	Side Stick	Side Stick	Side Stick	Side Stick	Side Stick
38 - D2	Snare Drum 1	Snare Drum 1	Gated Snare	EI. Snare Drum 1	808 Snare Drum
39 - D#2	Hand Clap	Hand Clap	Hand Clap	Hand Clap	Hand Clap
40 - E2	Snare Drum 2	Snare Drum 2	Snare Drum 2	Gated Snare	Snare Drum 2
41 - F2	Low Floor Tom	Room Low Tom 2	Room Low Tom 2	EI. Low Tom 2	808 Low Tom 2
42 - F#2	Close Hi-Hat	Close Hi-Hat	Close Hi-Hat	Close Hi-Hat	808 Close Hi-Hat
43 - G2	H. Floor Tom	Room Low Tom 1	Room Low Tom 1	EI. Low Tom 1	808 Low Tom 1
44 - G#2	Pedal Hi-Hat	Pedal Hi-Hat	Pedal Hi-Hat	Pedal Hi-Hat	808 Pedal Hi-Hat
45 - A2	Low Tom	Room Mid Tom 2	Room Mid Tom 2	EI. Mid Tom 2	808 Mid Tom 2
46 - A#2	Open Hi-Hat	Open Hi-Hat	Open Hi-Hat	Open Hi-Hat	808 open Hi-Hat
47 - B2	Low Mid Tom	Room Mid Tom 1	Room Mid Tom 1	EI. Mid Tom 1	808 Mid Tom 1
48 - C3	Hi Mid Tom	Room Hi Tom 2	Room Hi Tom 2	EI. Hi Tom 2	808 Hi Tom 2
49 - C#3	Crash Cymbal1	Crash Cymbal1	Crash Cymbal1	Crash Cymbal1	808 Crash Cymb 1
50 - D3	High Tom	Room Hi Tom 1	Room Hi Tom 1	EI. Hi Tom 1	808 Hi Tom 1
51 - D#3	Ride Cymbal 1	Ride Cymbal 1	Ride Cymbal 1	Ride Cymbal 1	Ride Cymbal 1
52 - E3	Chinese Cymbal	Chinese Cymbal	Chinese Cymbal	Reverse Cymbal	Chinese Cymbal
53 - F3	Ride Bell	Ride Bell	Ride Bell	Ride Bell	Ride Bell
54 - F#3	Tambourine	Tambourine	Tambourine	Tambourine	Tambourine
55 - G3	Splash Cymbal	Splash Cymbal	Splash Cymbal	Splash Cymbal	Splash Cymbal
56 - G#3	Cowbell	Cowbell	Cowbell	Cowbell	808 Cow Bell
57 - A3	Crash Cymbal2	Crash Cymbal2	Crash Cymbal2	Crash Cymbal2	Crash Cymbal2
58 - A#3	Vibraslap	Vibraslap	Vibraslap	Vibraslap	Vibraslap
59 - B3	Ride Cymbal 2	Ride Cymbal 2	Ride Cymbal 2	Ride Cymbal 2	Ride Cymbal 2
60 - C4	Hi Bongo	Hi Bongo	Hi Bongo	Hi Bongo	Hi Bongo
61 - C#4	Low Bongo	Low Bongo	Low Bongo	Low Bongo	Low Bongo
62 - D4	Mute Hi Conga	Mute Hi Conga	Mute Hi Conga	Mute Hi Conga	808 Mute Hi Cong
63 - D#4	Open Hi Conga	Open Hi Conga	Open Hi Conga	Open Hi Conga	808 Open Hi Cong
64 - E4	Conga Low	Conga Low	Conga Low	Conga Low	808Low Conga
65 - F4	High Timbale	High Timbale	High Timbale	High Timbale	High Timbale
66 - F#4	Low Timbale	Low Timbale	Low Timbale	Low Timbale	Low Timbale
67 - G4	High Agogo	High Agogo	High Agogo	High Agogo	High Agogo
68 - G#4	Low Agogo	Low Agogo	Low Agogo	Low Agogo	Low Agogo
69 - A4	Cabasa	Cabasa	Cabasa	Cabasa	Cabasa
70 - A#4	Maracas	Maracas	Maracas	Maracas	808 Maracas
71 - B4	Short Whistle	Short Whistle	Short Whistle	Short Whistle	Short Whistle
72 - C5	Long Whistle	Long Whistle	Long Whistle	Long Whistle	Long Whistle
73 - C#5	Short Guiro	Short Guiro	Short Guiro	Short Guiro	Short Guiro
74 - D5	Long Guiro	Long Guiro	Long Guiro	Long Guiro	Long Guiro
75 - D#5	Claves	Claves	Claves	Claves	808 Claves
76 - E5	Hi Woodblok	Hi Woodblok	Hi Woodblok	Hi Woodblok	Hi Woodblok
77 - F5	Low Woodblok	Low Woodblok	Low Woodblok	Low Woodblok	Low Woodblok
78 - F#5	Mute Cuica	Mute Cuica	Mute Cuica	Mute Cuica	Mute Cuica
79 - G5	Open Quica	Open Quica	Open Quica	Open Quica	Open Quica
80 - G#5	Mute Triangle	Mute Triangle	Mute Triangle	Mute Triangle	Mute Triangle
81 - A5	Open Triangle	Open Triangle	Open Triangle	Open Triangle	Open Triangle
82 - A#5	Shaker	Shaker	Shaker	Shaker	Shaker
83 - B5	Jingle Bell	Jingle Bell	Jingle Bell	Jingle Bell	Jingle Bell
84 - C6	Bell Tree	Bell Tree	Bell Tree	Bell Tree	Bell Tree
85 - C#6	Castanets	Castanets	Castanets	Castanets	Castanets
86 - D6	Mute Surdo	Mute Surdo	Mute Surdo	Mute Surdo	Mute Surdo
87 - D#6	Open Surdo	Open Surdo	Open Surdo	Open Surdo	Open Surdo

Concerto Drum Sounds Chart B

	JAZZ PC=33	BRUSH PC=41	ORCHES. PC=49	SOUND FX PC=57
24 - C1	Fingers Snap Left	Fingers Snap Left	Fingers Snap Left	
25 - C#1	Finger Snap Right	Finger Snap Right	Finger Snap Right	
26 - D1	Snare Roll	Snare Roll	Snare Roll	
27 - D#1	High Q	High Q	Closed Hi-hat	
28 - E1	Slap	Slap	Pedal Hi-Hat	
29 - F1	Scratch Push	Scratch Push	Open Hi-Hat	
30 - F#1	Scratch Pull	Scratch Pull	Ride Cymbal	
31 - G1	Sticks	Sticks	Sticks	
32 - G#1	Square Click	Square Click	Square Click	
33 - A1	Metron. Click	Metron. Click	Metron. Click	
34 - A#1	Metron. Bell	Metron. Bell	Metron. Bell	
35 - B1	Bass Drum 2	Bass Drum 2	Bass Drum 2	
36 - C2	Bass Drum 1	Bass Drum 1	Bass Drum 1	
37 - C#2	Side Stick	Side Stick	Side Stick	
38 - D2	Jazz Snare 2	Brush Tap	Concert SD	
39 - D#2	Hand Clap	Brush Slap	Castanets	High Q
40 - E2	Jazz Snare 1	Brush Swirl	Concert SD	Slap
41 - F2	Low Floor Tom	Low Floor Tom	Timpani F	Scratch Push
42 - F#2	Close Hi-Hat	Close Hi-Hat	Timpani F#	Scratch Pull
43 - G2	H. Floor Tom	H. Floor Tom	Timpani G	Sticks
44 - G#2	Pedal Hi-Hat	Pedal Hi-Hat	Timpani G#	Square Click
45 - A2	Low Tom	Low Tom	Timpani A	Metronome Click
46 - A#2	Open Hi-Hat	Open Hi-Hat	Timpani A#	Metronome Bell
47 - B2	Low Mid Tom	Low Mid Tom	Timpani B	Guitar Slide
48 - C3	Hi Mid Tom	Hi Mid Tom	Timpani C	Guitar Cut Noise 1
49 - C#3	Crash Cymbal1	Crash Cymbal1	Timpani C#	Guitar Cut Noise 2
50 - D3	High Tom	High Tom	Timpani D	Double Bass Slap
51 - D#3	Ride Cymbal 1	Ride Cymbal 1	Timpani D#	Key Click
52 - E3	Chinese Cymbal	Chinese Cymbal	Timpani E	Laughing
53 - F3	Ride Bell	Ride Bell	Timpani F	Screaming
54 - F#3	Tambourine	Tambourine	Tambourine	Punch
55 - G3	Splash Cymbal	Splash Cymbal	Splash Cymbal	Heart Beat
56 - G#3	Cowbell	Cowbell	Cowbell	Foot Step 1
57 - A3	Crash Cymbal2	Crash Cymbal2	Concert Cymb. 2	Foot Step 2
58 - A#3	Vibraslap	Vibraslap	Vibraslap	Applause
59 - B3	Ride Cymbal 2	Ride Cymbal 2	Concert Cymb. 1	Door Creaking
60 - C4	Hi Bongo	Hi Bongo	Hi Bongo	Door Closing
61 - C#4	Low Bongo	Low Bongo	Low Bongo	Scratch
62 - D4	Mute Hi Conga	Mute Hi Conga	Mute Hi Conga	Wind Chime
63 - D#4	Open Hi Conga	Open Hi Conga	Open Hi Conga	Car Start
64 - E4	Conga Low	Conga Low	Conga Low	Car Breaking
65 - F4	High Timbale	High Timbale	High Timbale	Carr Pass
66 - F#4	Low Timbale	Low Timbale	Low Timbale	Car Crash
67 - G4	High Agogo	High Agogo	High Agogo	Police
68 - G#4	Low Agogo	Low Agogo	Low Agogo	Train
69 - A4	Cabasa	Cabasa	Cabasa	Jet
70 - A#4	Maracas	Maracas	Maracas	Helicopter
71 - B4	Short Whistle	Short Whistle	Short Whistle	Starship
72 - C5	Long Whistle	Long Whistle	Long Whistle	Gun Shot
73 - C#5	Short Guiro	Short Guiro	Short Guiro	Machine Gun
74 - D5	Long Guiro	Long Guiro	Long Guiro	Laser
75 - D#5	Claves	Claves	Claves	Explosion
76 - E5	Hi Woodblok	Hi Woodblok	Hi Woodblok	Dog
77 - F5	Low Woodblok	Low Woodblok	Low Woodblok	Horse
78 - F#5	Mute Cuica	Mute Cuica	Mute Cuica	Birds
79 - G5	Open Quica	Open Quica	Open Quica	Rain
80 - G#5	Mute Triangle	Mute Triangle	Mute Triangle	Thunder
81 - A5	Open Triangle	Open Triangle	Open Triangle	Wind
82 - A#5	Shaker	Shaker	Shaker	Seashore
83 - B5	Jingle Bell	Jingle Bell	Jingle Bell	Bubble
84 - C6	Bell Tree	Bell Tree	Bell Tree	Yeah
85 - C#6	Castanets	Castanets	Castanets	
86 - D6	Mute Surdo	Mute Surdo	Mute Surdo	
87 - D#6	Open Surdo	Open Surdo	Open Surdo	
88 - E6			Applause	

Appendix C

This Section For DA-100 Owners ONLY

Concerto DA-100 Memory Card Memory Card Device Prior to Archival

Overview

The RAM-64 Memory card will hold 64 Performance Registers at one time from your Concerto. These can be either from Songs 1 to 8 or from Songs 9 to 16. The memory card must be inserted with the chrome cover face down and going in first. Opposite of the chrome cover you will find a small switch that is used for memory protection. Next to the switch is a small plastic carrier that pulls out (see the indent where the nail of your thumb can be used to pull the carrier out). The card may be shipped to you with the carrier partially open.

Installing Battery

Pull the battery carrier out and install the 2016 battery in the carrier positive side up and insert the carrier back into the slot fully inserted. The battery will last about two years but we suggest you change the battery once a year.

Using the Memory Card

With the Concerto OFF insert the card with the chrome end face down first into the Concerto Generator until you feel the card latch into place. You will first feel a little resistance and then the card will firmly latch into place. Make sure you always insert and remove the memory card with the power OFF.

With the power ON from the grill of the accordion enter the GLOBAL screen by pressing SELECT and NEXT together. Then with the NEXT key turn the page in the display until you come to the page dealing with the memory card. Note that if the memory card is not installed correctly the screen will read MEMORY CARD NOT INSTALLED. Then use the SOLO key to change the wording in the display. There are four options.

*RECALL SONGS 1 to 8=
COPY from CARD to *Concerto song banks 1 to 8

*RECALL SONGS 9 to 16=
COPY from CARD to *Concerto song banks 9 to 16

SAVE SONGS 1 to 8=
Save from Concerto to CARD song banks 1 to 8

SAVE SONGS 9 to 16=
Save from Concerto to CARD song banks 9 to 16

*RECALL will ERASE registers in the accordion and replace them with registers stored on the card!

Memory Protect Switch

The memory protect switch will allow you to save data on the card & not accidentally write over or erase the settings you have saved. When the switch is in the WRITE PROTECT position positions 1 and 2 above will read MEMORY PROTECTED and the Concerto will not allow you to write onto the protected card. If you want to SAVE information to a protected card simply move the switch.